


Angle head HD10 - Pluto15

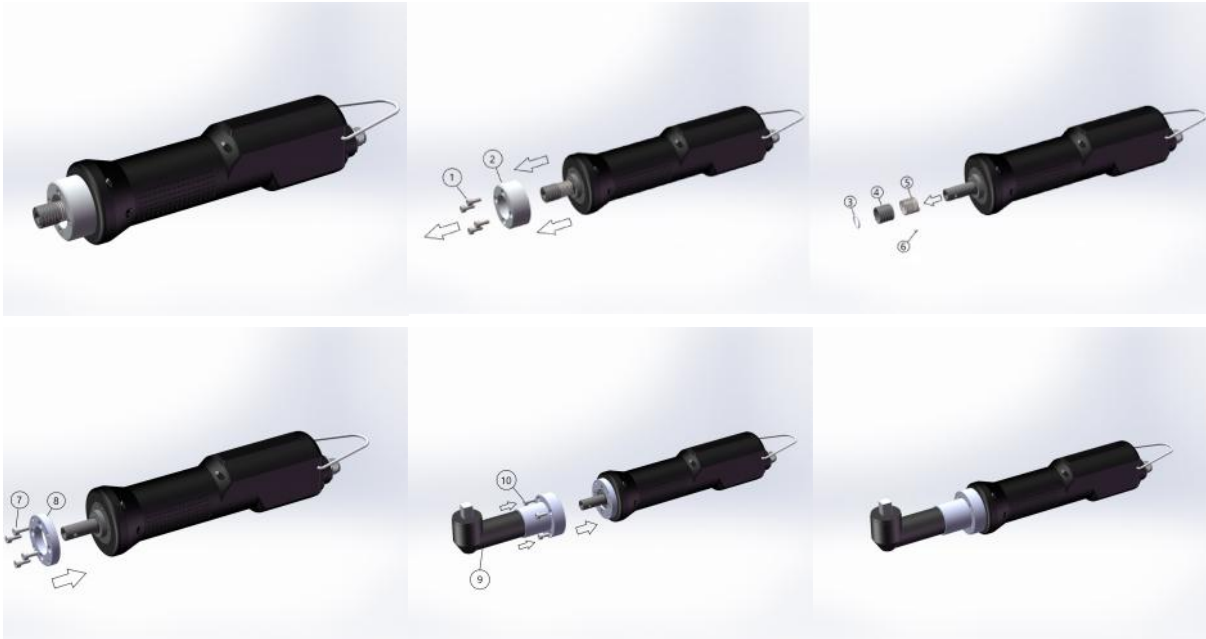

Instructions:

- Untighten the screw (1) and disassemble part (2)
- Remove the ring (3) then disassemble parts (4) (5) (6)
- Assemble part (8) and fix it with screws (7)
- Assemble the head (9) and fix it with screw (10)

